


ASSEMBLY INSTRUCTIONS
WALL CABINET (WC3016)

CABINET PARTS LIST

A-Face Frame B-End Panels(2) C-Center Face Frame D-Bottom Panel &Top Panel
E-Back Panel

HARDWARE PARTS LIST

1. Screws (Ø3.5*25-12) 2. Screws (Ø3.5*30-4)

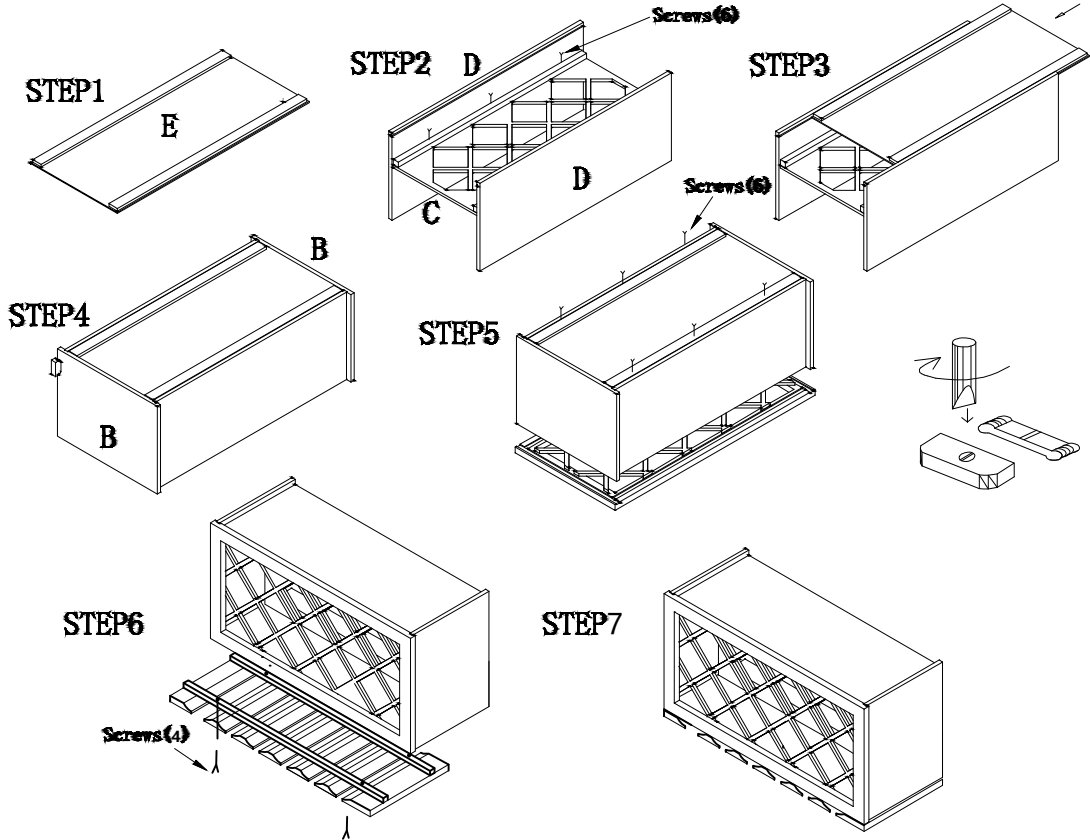

Your cabinet is complete. For installation, consult a professional contractor or building supplier for the proper installation method or materials to be used for your existing wall condition (e.g., wood, concrete, tile, etc.).