

ASSEMBLY INSTRUCTIONS

BASE CRONER CABINET

| Part | Descriptions | Qty | Part | Description | Qty | Part | Description | Qty |
|------|----------------------------|-----|------|----------------------------|-----|------|------------------------|-----|
| A | Left Face-frame | 1 | I | L-Shaped Steel | 10 | P | Back Rail | 1 |
| B | Right Face-frame | 1 | J | Screw $\phi 3.5 \times 12$ | 40 | Q | Door | 1 |
| C | Screw $\phi 3.5 \times 25$ | 26 | K | Bottom With Lazy Susan | 1 | R | Hinge With Screws | 2 |
| D,E | Front Side Panel | 2 | L | Shelf With Lazy Susan | 1 | S | Magnetic Door Catchers | 1 |
| F | Cam Lock | 6 | M,N | Back Side Panel | 2 | | | |
| G,H | Toe Kick | 2 | O | Back Panel | 1 | | | |

This instructions applies to the following items: **DCB33~DCB36.**



****Optional to add glue, it's helpful to add strength** (wood glue not included)**

STEP 1: Slide-in the Sides to the Frame.

STEP 2: Slide-in the Top and Bottom.

STEP 3: Slide-in the Back to the Cabinet Box.

STEP 4: Secure the Corners of the Box by using the L-Shaped Steel.

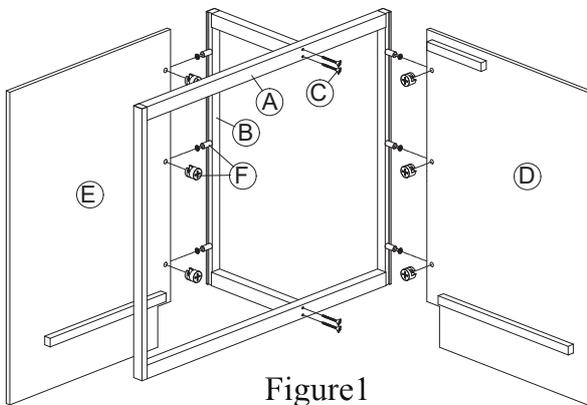


Figure1

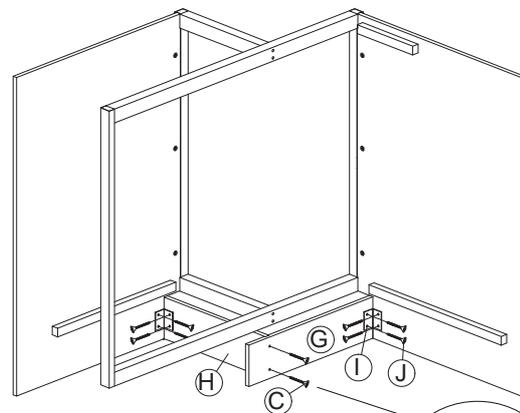


Figure2

SCREW DRIVER



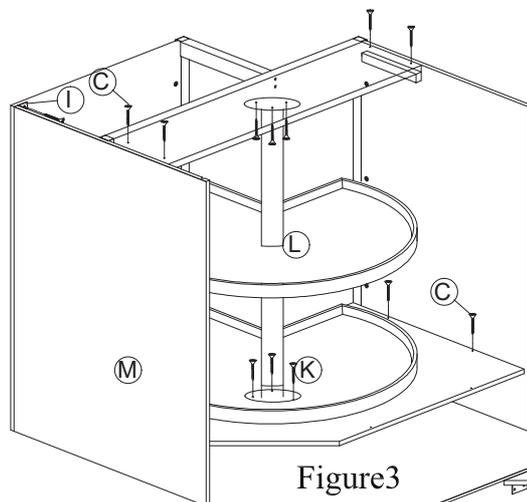


Figure3

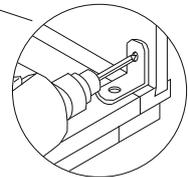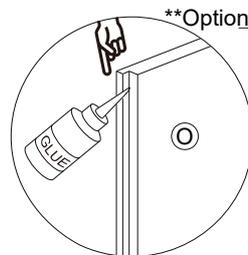

****Optional**

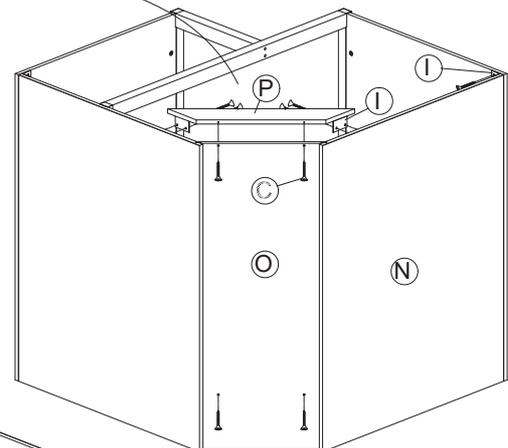


Figure4

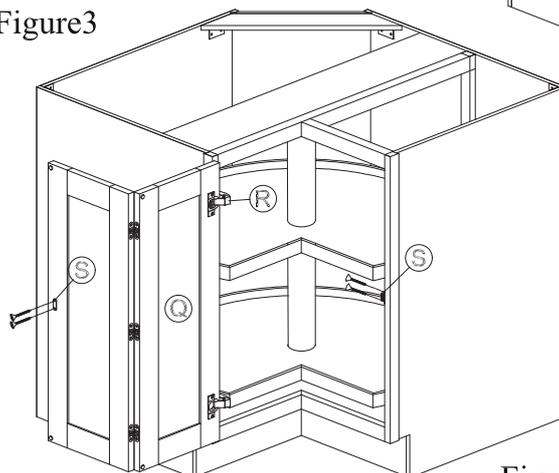


Figure5